


# RANE 70/72 INSTALLATION

## For Innofader Rane 1-70-72

### TOOLS NEEDED:

- 1) Phillips screwdriver
- 2) 2.5mm hex wrench

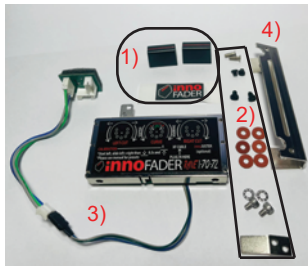


Identify all of the following parts inside the box for this installation:

- 1) 2 Innofader caps and sticker
- 2) Stem and various screws
- 3) Innofader assembly with cables and adapter PC board
- 4) Rane 70/72 Mounting bracket.

The Innofader Rane 1-70-72 is pre-wired for easier installation.

Mount the stem to the Innofader Rane 1-70-72. The screw head & washer are below the Innofader tab. Screws thread to the stem which sits on top of the Innofader as shown with the bend towards the body of the Innofader.

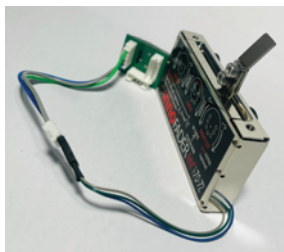


Use the mini black screws to assemble the bracket to the fader. When properly assembled, the stem will travel freely back and forth.



If the stem is not in the center of the slot, please loosen the stem and adjust it to align the stem. Also see the bottom of page 2 in case you still have centering issues after mounting to the Rane mixer.

# RANE 70/72 INSTALLATION (cont.)

## MOUNTING OF FADER ASSEMBLY

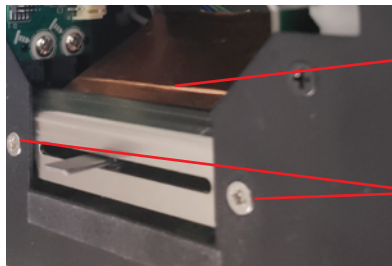

Innofader Rane 1-70-72 can be mounted in any of the 3 fader slots. For the crossfader, copper back will face inside the Rane mixer.

Use 2x M3 8mm or 2x M3 6mm plastic screws for mounting

## INSTALLATION NOTES

\*1 You may find that it is difficult to mount the Innofader without the stem scraping against one side of the faceplate. Please try adjusting the stem position first. If it is necessary to bend the stem, bend it in the middle section where the stem has a natural bend to avoid bending either the top part where the knob goes or bottom part where the holes are.



REMOVE the stem from the Innofader first to prevent screw hole damage!