

# MINI INNOFADER PRO STX INSTALLATION

## 1) REMOVE STX PLATE SCREWS



A standard medium sized Phillips head screwdriver will work for the entire installation.

\*\*\*Save the two black screws for step 4)!!!

---


## 2) PLUG 4 PIN CABLE FROM THE STX INTO THE 4 PIN SOCKET



For ease of installation, bend the plug to a 90 degree angle and line it up with the socket. Then you can easily press fit the plug into the socket.

---

## 3) SEE "MINI INNOFADER NANO ADJUSTMENT PROCEDURE"

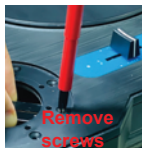

Optional but highly recommended! Nano plate screw removal is similar to step 1) and 3) here. See the Adjustment Procedure for instructions on how to remove the gap on the Nano and match the Pro and Nano cut points.