


INNOJUSTER HOOKUP FOR INNOFADER PNP3

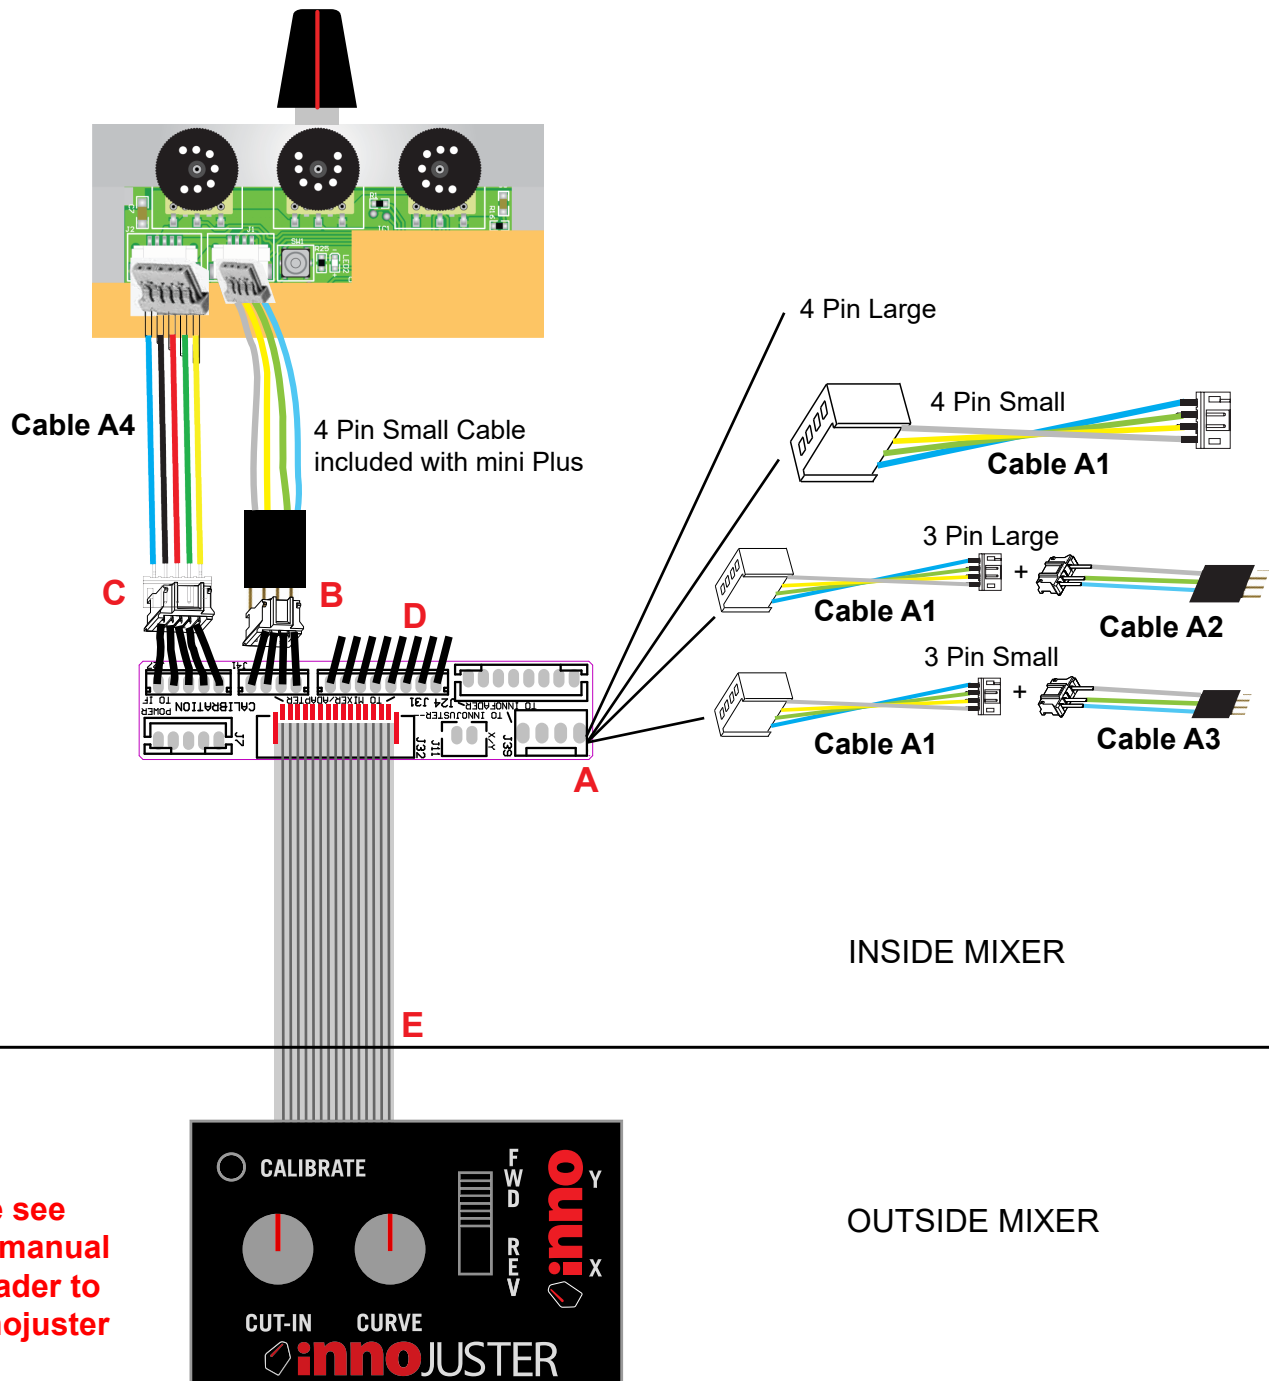

Starting with the Innofader already installed and working, please wire the Innojuster as follows:

A) Plug the crossfader cable according to the size and number of pins:

- > 4 pin Large - plug directly into the adapter
- > 4 pin Small - use cable A1
- > 3 pin Large - use cable A1 and cable A2
- > 3 pin Small - use cable A1 and cable A3

B) Plug in the 4 Pin Small Cable included with the Innofader PNP3

C) Connect Innojuster cable in series with Cable A4

D) Leave cable disconnected

E) Hook up the flat cable from the Innojuster PC board to the Innojuster box.

OTHER INSTALLATION NOTES:

- 1) You can use Velcro bits included with the Innojuster to mount it to the mixer
- 2) Please use insulation tube on the small PC board to prevent short circuiting inside the mixer.