



For the Perfect Scratch:

The mini Innofader Plus has 3 adjustments: **cut-in, curve, and polarity**. Make sure you do these with the power on and side "A" is the side with the button. As shown below, you make these adjustments by:


- 1) Starting the fader in the left (A), middle (B), or right (C) regions of the fader
- 2) pressing and holding the calibration button
- 3) sliding the fader stem through certain patterns while holding the calibration button, and
- 4) releasing the calibration button to save your adjustment.

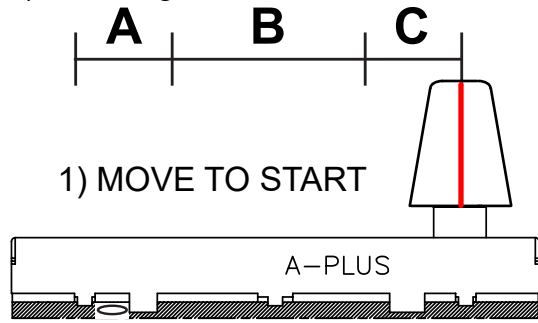

- 1) Move to the correct starting position: "A", "B", or "C" depending on the code in step 3. For example, Right increase lag code is "CB", so start in "C" position as shown here.

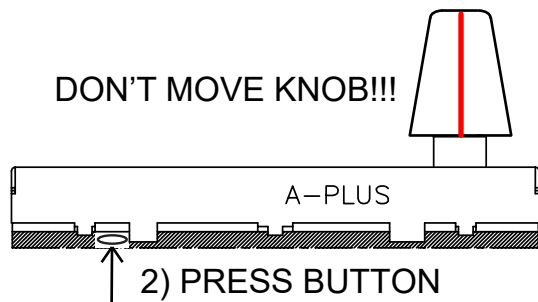

- 2) Press **and hold** the calibration button. Be careful not to move the knob while pressing the button!

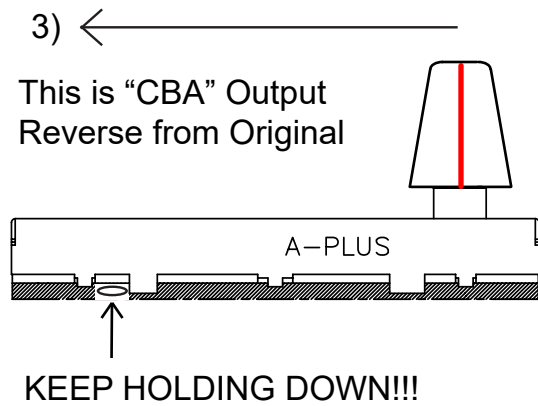

- 3) Slide fader as such **while holding calibration button down!**

CUT-IN: adjustment is small, maybe do a few times!

Left Increase lag ~ 0.15mm	AB	----->
Left decrease lag ~ 0.15mm	BA	<-----
Right increase lag ~ 0.15mm	CB	<-----
Right decrease lag ~ 0.15mm	BC	----->

CURVE: go here for mixer specific suggestions:


<http://www.innofader.com/compatible.php>

B type linear factory default	BAB	<----- ----->
On off for scratching	BCB	<-----> ----->
C type slightly sharp	BCBA	<-----> ----->
CH1 L/R Cut (except PT-01)	CBC	<-----> ----->
CH1 L/R Cut (PT-01 only)	ABA	<-----> ----->
CH1 L/Mid Cut (PT-01 only)	ABCB	<-----> ----->

IF YOU DO THE WRONG PATTERN
YOU CAN REPEAT STEPS 1-4 AS
MANY TIMES AS YOU NEED.

POLARITY: do if the fader fits only one way
and the output is reversed.

Factory default forward	ABC	----->
Output reversed from original	CBA	<-----

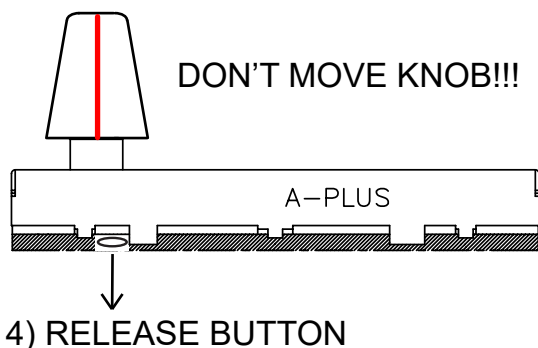

- 4) Release calibration button. Be careful not to move the knob while releasing the button!

CONTACT AND LINKS FOR FURTHER READING:

Contact us for ANY installation questions. We're here to help you!
Mail to: support@audioinnovate.com

Interactive list of Innofader compatible mixers w. product specific info:
<http://www.innofader.com/compatible.php>

Mini Innofader Plus-S webpage:
<http://www.innofader.com/products.php?id=25>